


Clearance

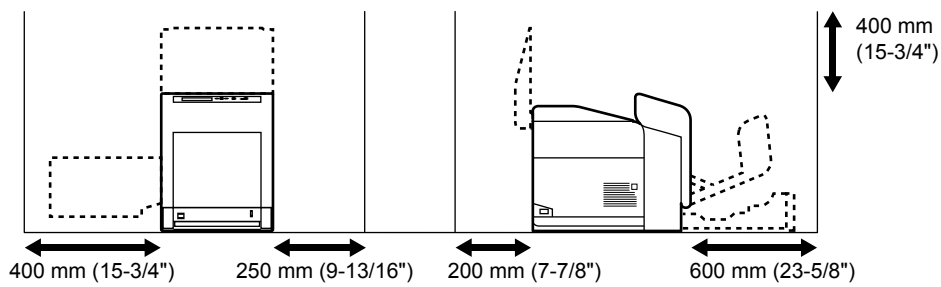

Environment

- Temperature: 10 to 32.5 °C (50 to 90.5 °F) The humidity should be 70 % or less when the temperature is 32.5 °C (90.5 °F)
- Humidity: 15 to 80 %RH The temperature should be 30 °C (86 °F) or less when the humidity is 80 %
- Power Supply: 120 V AC, 60 Hz, 9.2 A / 220 to 240 V AC, 50/60 Hz, 4.7 A




CAUTION: Be sure to provide enough space around printer. Prolonged use without sufficient clearance may cause overheating.


1 Unpacking

- 1 Unpack the printer and all its included components.

Important: The printer must be carried by two persons.

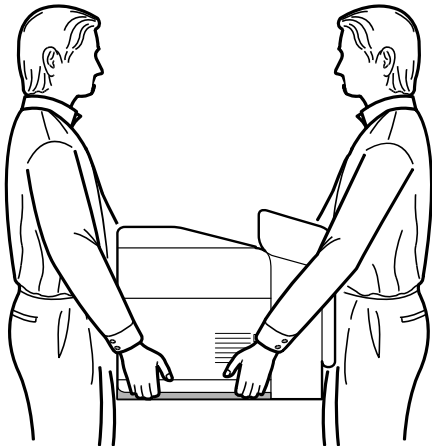


- 2 Check the parts and components.

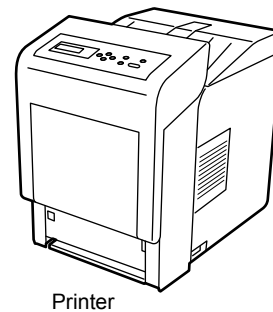

Printer



CD-ROM

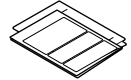





Manuals and Other Printed Materials



Power Cord




Waste Toner Box

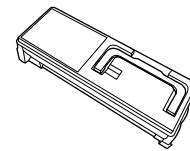

Toner Containers (4)




2 Installing the Toner Container and Waste Toner Box

- 1 Open the top cover until it stops.

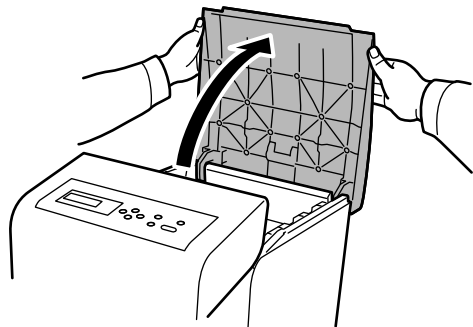


- 2 Before installing the toner container, open the slide lever (yellow-colored) on the developer unit. The toner container cannot be installed until the slide lever is open. Proceed as follows:

To open the slide lever, squeeze and hold the lever (1), and slide the lever all the way toward the direction of the arrow indicated (2) on the lever. When the slide lever is open, install the toner container.

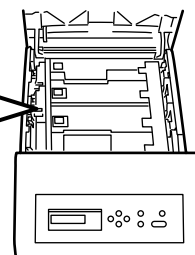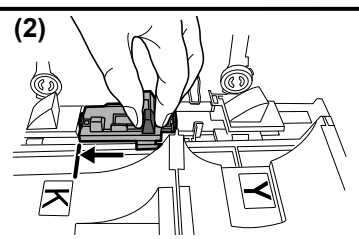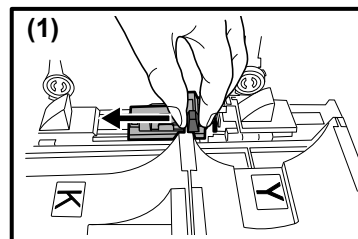


- 3 Hold the toner container with the upside down markings (caution notes, etc.) facing downward and shake it 5 or 6 times as shown.

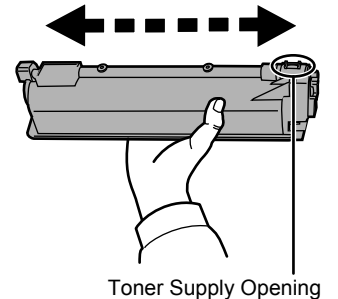


Toner Supply Opening

- 4 Place the new toner container in the printer with the markings facing upward.

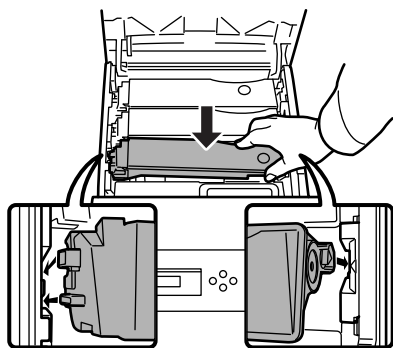


Note: Ensure the toner container is in the correct location for that color.

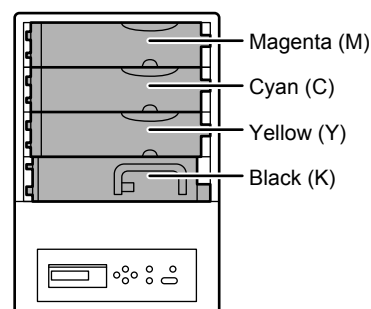


- 5 Push down on the container until it clicks firmly into place.


Follow the procedure above to install the other color toner containers.

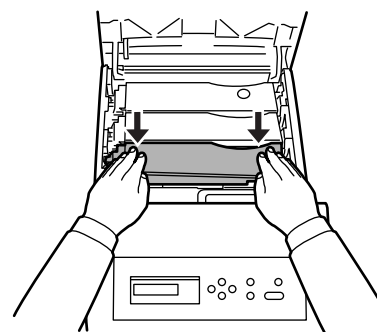


- 6 Close the top cover.

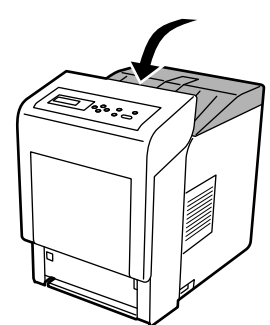

- 7 Open the left cover.

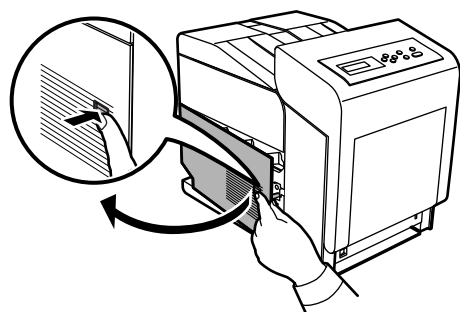


- 8 Open the cap of the waste toner box.

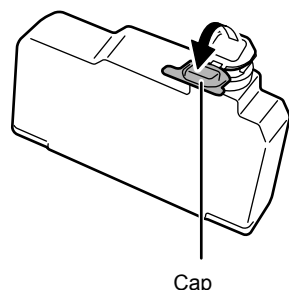


Cap

- 9 Position the bottom of the waste toner box in the receptacle and push the box down until it snaps firmly into place.




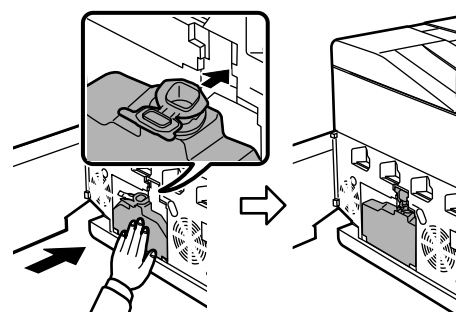


- 10 Close the left cover.


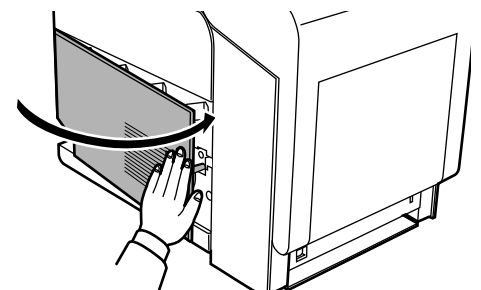


3 Loading Paper


- 1 Pull the paper cassette all the way out of the printer.
- 2 Turn the paper size dial so that the size of the paper to use appears in the paper size window.
- 3 Adjust the paper width guides to fit the paper size.
- 4 Adjust the paper length guide to fit the paper size.

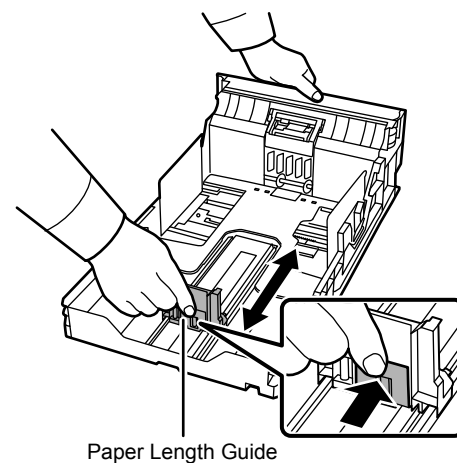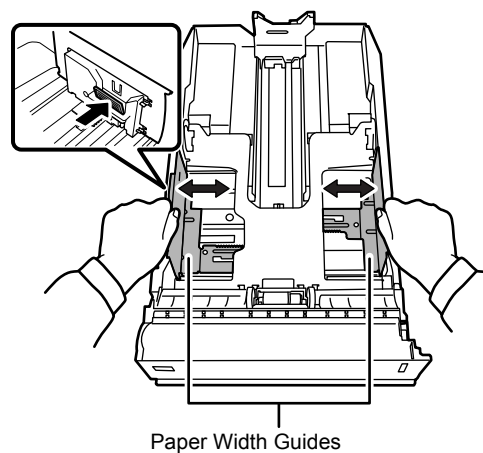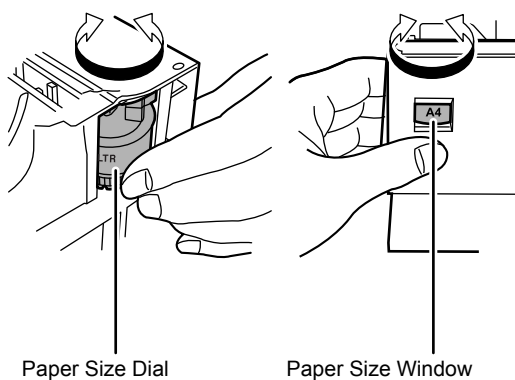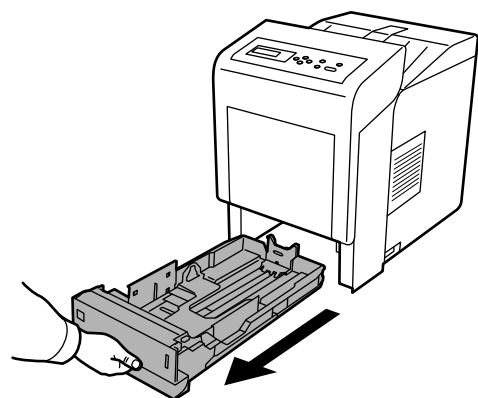


- 5 Fan the paper, then tap it on a level surface to avoid media jams or skewed printing.
- 6 Load paper in the cassette, with the side to be printed upward.

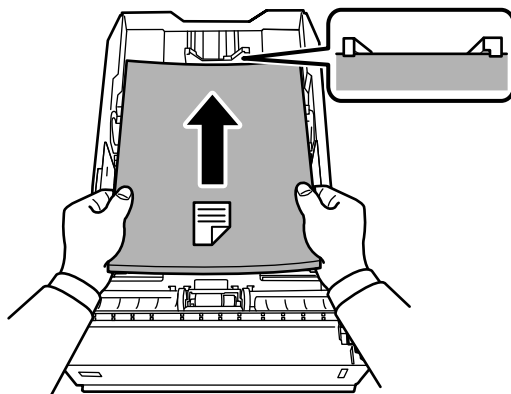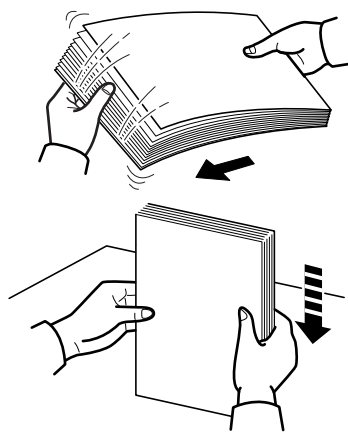

Important: Do not exceed the upper limit of the cassette. Otherwise, it may cause paper jams.



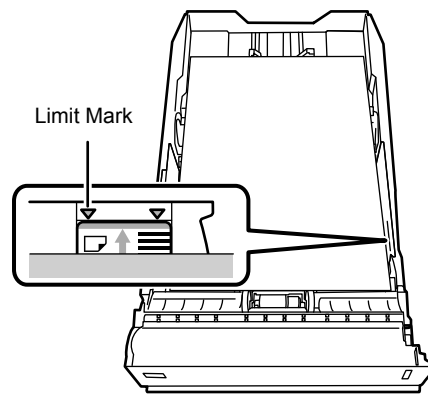


- 7 Insert the paper cassette into the slot in the printer. Push it straight in as far as it will go.

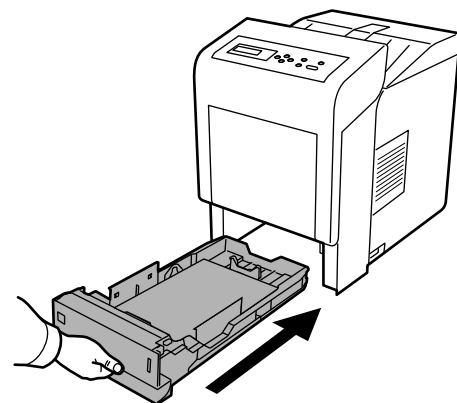



4 Connecting Cables

- 1 Turn the power switch off (O).
- 2 Connect the printer to the PC or your network device. Use shielded interface cables. These cables are sold separately.
- 3 Connect the power cord to the printer and the other end into a power outlet.

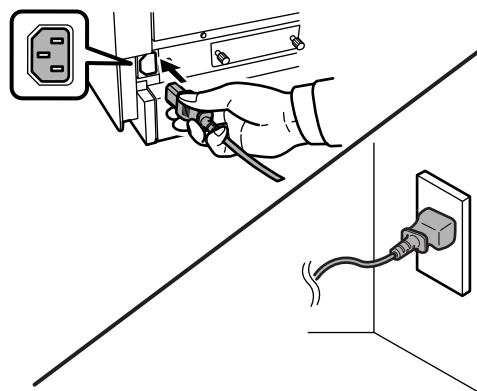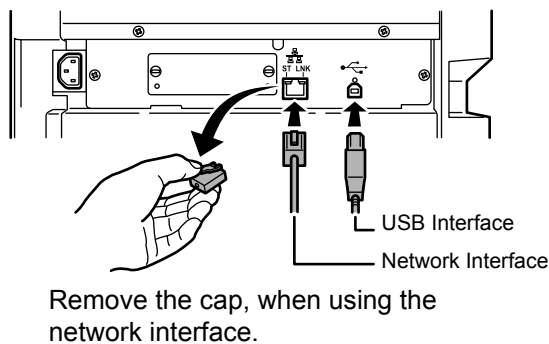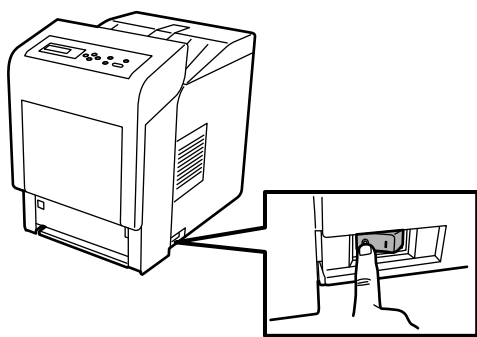

5 Envelope Switch

- 1 Press the lever to release the lock and pull out the front cover.
- 2 The printer is set to **Envelope Mode (Right side)** with shipment. Set the Envelope Switch to **Normal (Left side)** before printing on normal paper.

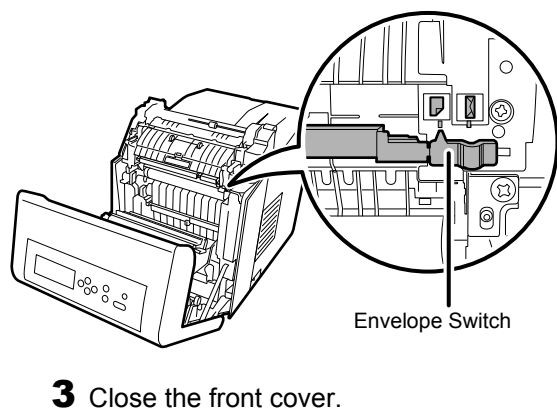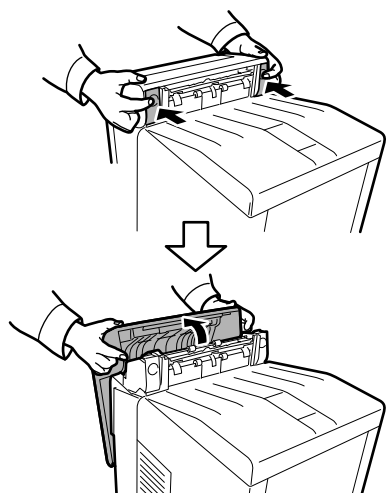

- 3 Close the front cover.

6 Selecting the Message Language

- 1 Turn the power switch on (I).
Important: The printer will begin cleaning the LSU; this will take approximately 70 seconds.
- 2 Wait until the message display indicates MSG Language. The default message language is English.
- 3 To change the language, press [△] or [▽] repeatedly until the message display shows the desired language.
- 4 Press [OK]. The message language will be changed.

